



Innovation
that excites

NISSAN LEAF

PERIODIC MAINTENANCE

The following tables show the normal maintenance schedule. Depending on weather and atmospheric conditions, varying road surfaces, individual driving habits and vehicle usage, additional or more frequent maintenance may be required. **Periodic maintenance beyond the last period shown on the tables requires similar maintenance.**

EV SYSTEM MAINTENANCE

Abbreviations: R = Replace, I = Inspect and correct or replace as necessary, [] = At the specified mileage only

MAINTENANCE OPERATION		MAINTENANCE INTERVAL									
		15 (9)	30 (18)	45 (27)	60 (36)	75 (45)	90 (54)	105 (63)	120 (72)	135 (81)	150 (90)
Perform at kilometres (miles) or months intervals, whichever comes first.	km x 1 000 (mile x 1 000) Months										
Charging port		I	I	I	I	I	I	I	I	I	I
Charging port rubber cap			I		I		I		I		I
Cooling system			I		I		I		I		I
Cooling system coolant	See NOTE (1)										
EV battery-usage report		I	I	I	I	I	I	I	I	I	I
Computer diagnosis		I	I	I	I	I	I	I	I	I	I

NOTE:

(1) When adding or replacing coolant, be sure to use only Genuine Nissan Long Life Coolant (Blue) or equivalent with the proper mixture, in order to avoid possible aluminum corrosion within the cooling system caused by the use of non-genuine coolant. The recommended service interval of the factory-fill coolant is 200 000km (125 000 miles) or 15 years, whichever comes first. Subsequent replacement of Genuine Nissan Long Life Coolant (Blue) should occur every 80 000km (48 000 miles) or 4 years, whichever comes first. Mixing any other type of coolant or the use of non-distilled water will reduce the recommended service interval of the coolant.



Innovation
that excites

NISSAN LEAF

PERIODIC MAINTENANCE

The following tables show the normal maintenance schedule. Depending on weather and atmospheric conditions, varying road surfaces, individual driving habits and vehicle usage, additional or more frequent maintenance may be required. **Periodic maintenance beyond the last period shown on the tables requires similar maintenance.**

CHASSIS AND BODY MAINTENANCE

Abbreviations: R = Replace, I = Inspect and correct or replace as necessary

MAINTENANCE OPERATION	km x 1 000 (mile x 1 000) Months	MAINTENANCE INTERVAL									
		15 (9)	30 (18)	45 (27)	60 (36)	75 (45)	90 (54)	105 (63)	120 (72)	135 (81)	150 (90)
Perform at kilometres (miles) or months intervals, whichever comes first.	12										
Brake system and fluid (For level & leaks)		I	I	I	I	I	I	I	I	I	I
Brake fluid ★			R		R		R		R		R
Reduction gear oil		I	I	I	I	I	I	I	I	I	I
Steering gear & linkage ★			I		I		I		I		I
Axle & suspension parts ★			I		I		I		I		I
Front drive shafts ★			I		I		I		I		I
Brake pads, rotors & other brake components ★		I	I	I	I	I	I	I	I	I	I
Foot brake, parking brake (For free play, stroke & operation)		I	I	I	I	I	I	I	I	I	I
Air-conditioner filter ★			R		R		R		R		R

Maintenance items with ★ should be performed more frequently according to "Maintenance under severe driving conditions"



Innovation
that excites

NISSAN LEAF

MAINTENANCE UNDER SEVERE DRIVING CONDITIONS

The maintenance intervals shown on the preceding pages are for normal operating conditions.

If the vehicle is mainly operated under severe driving conditions as shown below, more frequent maintenance must be performed on the following items as shown in the table.

Periodic maintenance beyond the last period shown on the tables requires similar maintenance.

Severe driving conditions

A - Driving under dusty conditions

B - Driving repeatedly short distances

C - Towing a trailer or caravan

D - Extensive idling

E - Driving in extremely adverse weather conditions or in areas where ambient temperatures are either extremely low or extremely high

F - Driving in high-humidity areas or in mountainous areas

G - Driving in areas using salt or other corrosive materials

H - Driving on rough and/or muddy roads, or in the desert

I - Driving with frequent use of braking or in mountainous areas

Operation : Inspect = Inspect and correct or replace as necessary

Driving condition	Maintenance item	Maintenance operation	Maintenance interval
. F	Brake fluid	Replace	Every 15 000km (9 000 miles) or 12 months
. G H	Steering gear & linkage	Inspect	Every 15 000km (9 000 miles) or 12 months
. G H	Axle & suspension parts	Inspect	Every 15 000km (9 000 miles) or 12 months
. G H	Front drive shafts	Inspect	Every 15 000km (9 000 miles) or 12 months
A G H I	Brake pads, rotors & other brake components	Inspect	Every 7 500km (4 500 miles) or 6 months
A	Air-conditioner filter	Replace	More frequently

More frequently = Less than half the interval of that for normal driving conditions.